

Guide for inside Mount only

SOOTAR	DECIMAL	FRACTION	QUARTER	Lines 16
1	0.125	1/8		2 ND line
2	0.25	1/4	1ST	4th line
3	0.375	3/8		6 th line
4	0.50	1/2	2ND	8th line
5	0.625	5/8		10 th line
6	0.75	3/4	3RD	12th line
7	0.875	7/8		13 th line
8	1 inch	8/8	4 TH	16 th line

Unit of measure is foot, inches and sootar

We mostly count 2,4,6 Sootar/ 0.25, 0.50,0.75 and $\frac{1}{4}$, $\frac{1}{2}$, $\frac{3}{4}$

You can write/send sizes in one of three ways

1. 4ft 1inch 2 sootar, 4ft 1inch 4 sootar, 4ft 1inch 6 sootar
2. 49.25, 49.50, 49.75
3. 49 $\frac{1}{4}$, 49 $\frac{1}{2}$, 49 $\frac{3}{4}$


For Measuring inside window with round down to nearest 1/8 or 1 sootar

For Height round up to nearest 1/8 or 1 sootar.

For example

window width 49.375 will become 49.25

window height 96.75 will become 97

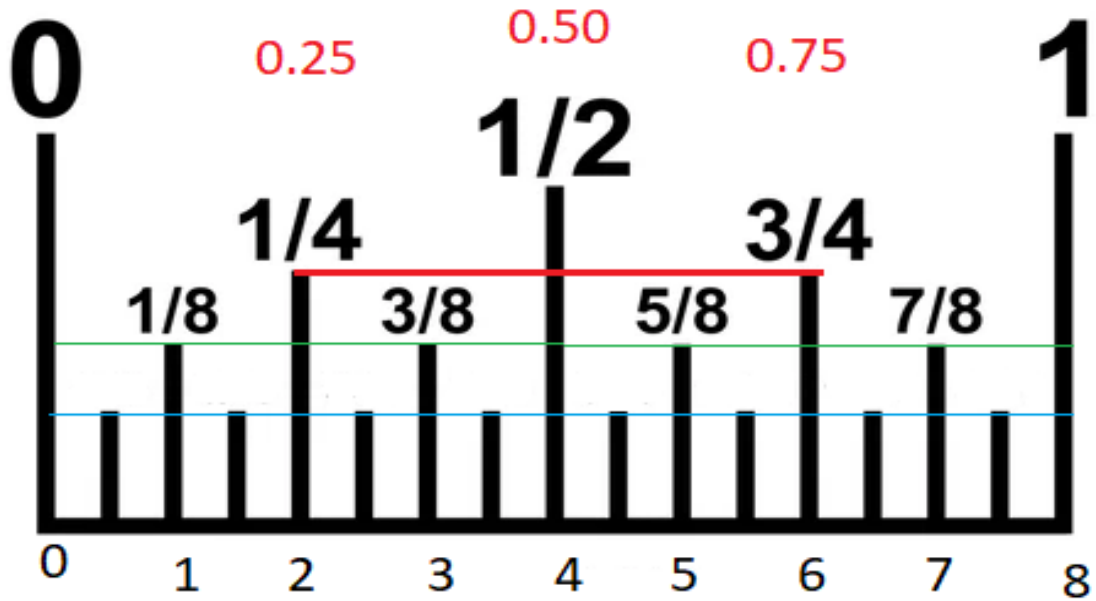

0322

