




# Measuring Guide

## For Window Blinds

1. Use **Steel Measuring Tape**.
2. Please Measure in **inches**
3. First **Measure Width** from Left Side to Right
4. Then **Measure Height** from Top to bottom.
5. What's the **Window Location**? E.g. Home: Bedroom Window
6. **Send Window Picture** & Decide Your Mount Method. Either Inside Window or Above Window. Check the instructions below to decide.

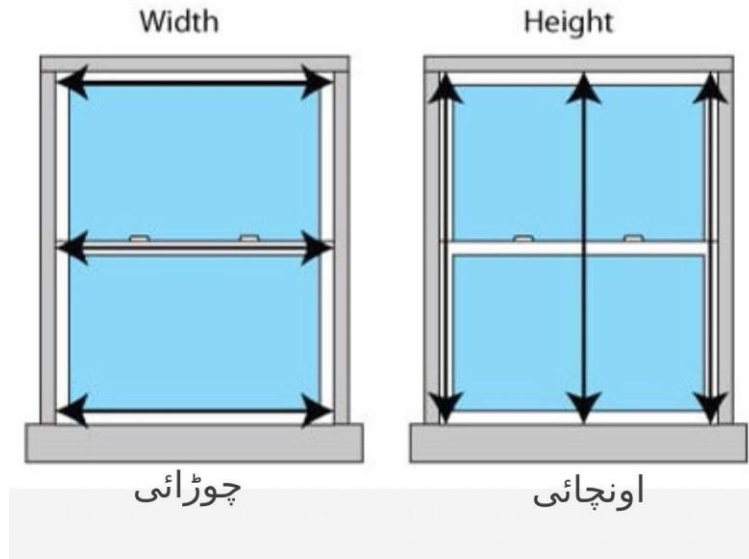

Actual Window

## How to Measure for Inside Window


Check Window Depth = The Space after glass/grill



Minimum depth required 2.50 Inches

Inside Width

Inside Height

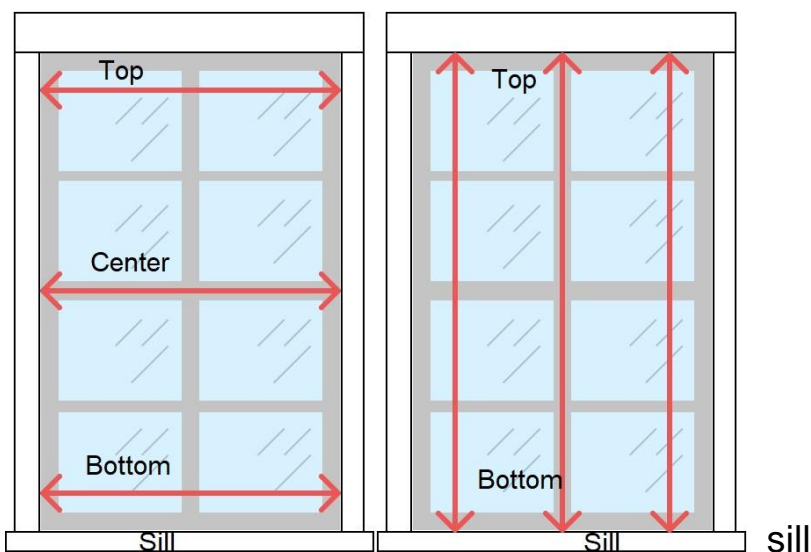


Measure inside window width from top, center & bottom.

Measure Inside window height from top to bottom

Don't make any deductions.

## How to Measure for Above Window

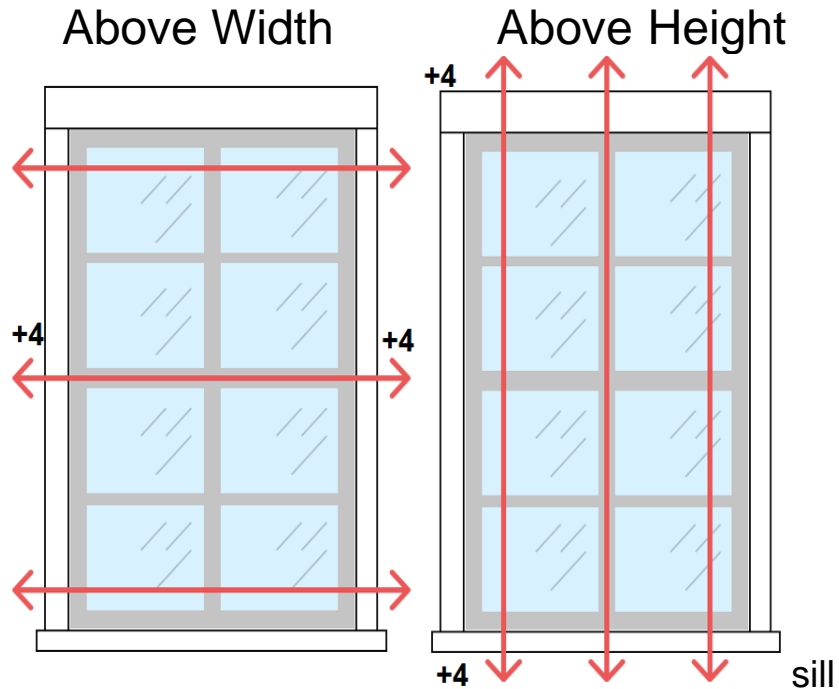

Add 4 inches' extra from both window corners in width

Add 4 inches' extra from window top to bottom corners in Height

Total overlap should be 8 inches in width & Height from actual  
window size

### Remarks

Please send your Window Measurements + Window Picture at Whats App

03228015567 to discuss Your Order